



## Using your iPhone 7 with Seawag

- 1. Launch Settings.
- 2. Tap General.
- 3. Tap Accessibility.

••• ≎ 9:41 AM Settings	L \$ <b>■</b> +	••••• 🗢 9:41 AM ttings	<ul> <li></li> <li></li> <li></li> <li></li> </ul>	Settings General	C 🖇 🗖
Q Setting:	s	General	>	About	
Airplane Mode	$\bigcirc$	htness	>	Software Update	
🔊 Wi-Fi	Ashmead >	Per	>		
Bluetooth	On >	Sounds	>	Spotlight Search	
🔊 Cellular	Off >	Siri	>	Handoff	
		Touch ID & Passcode	>		
Notifications	>	Battery	>		
Control Center	>	Privacy	>	Accessibility	
Do Not Disturb	>	(a) iClaud		oud Usage	
		iCloud meridian.stayman@icloud.com	>	Background App Refresh	
General	>	iTunes & App Store	>		

- 4. Tap AssistiveTouch under the Interaction category.
- 5. Tap the toggle switch to turn on AssistiveTouch.
- 6. You should see a small rounded rectangle with a circle in the middle appear on your screen.

•••••	→ + •••••	••••• ♥         9:41 AM         € * ■ +           ✓ Accessibility AssistiveTouch
witch Conti	AssistiveTouch	AssistiveTouch
ssistiveTouch	require an adaptive accessory.	AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an adaptive accessory.
uch Accor Off	Customize Top Level Menu >	Customize Top Level Menu >
Keyboard	> CUSTOM GESTURES	CUSTOM GESTURES
Shake to Undo On	> Create New Gesture >	Create New Gesture >
Vibration On	Custom gestures allow you to record gestures that can be activated from Custom in the Menu.	Custom gestures allow you to record gestures that can be activated from Custom in
Call Audio Routing Automatic		
Home Button	<u>х</u>	
HEARING		

7. Enjoy your adventures with your new Seawag pouch!